

Instructions for M5 Aurand scarifier

● BEFORE OPERATING

- The Aurand cleaning tool (electric model) is equipped with a universal type motor which is equally efficient on either direct or alternating current. It is furnished for use with either 115 or 230 voltage. Both voltages are NOT possible on one machine. The voltage must be stamped on the name plate. The M tool has been thoroughly tested and shipped complete but DO NOT attempt to operate without carefully reading the following instructions.

● OPERATING INSTRUCTIONS

- Wear safety glasses and hearing protection.
- Grasp both handles and raise front of tool from surface. Then squeeze trigger. Allow cutters to come up to speed before applying to surface.
- Using both hands, guide tool in a forward and back motion to assure complete coverage. Let weight of tool do the work. Apply only enough pressure to front head of tool to keep tool from bouncing off the surface. Excessive pressure will slow down motor speed and cause damage to motor, gears, and cutter bundles.

● DEPTH ADJUSTMENT

- When adjustment is required to compensate for cutter wear:
- Loosen SCREW (7M)
- Move DEPTH SHOE (6M) up or down as required. (Cutters should have play in them when touching work surface).
- Tighten SCREW (7M).